

Scribbler Tube Writer



Quick Start Guide

- choose tube holder plate according to the tube diameter
- press Space if the printer is sleeping
- move in the menu by clicking arrows and Enter, move back by clicking Esc


1. Tube type

- choose the length (mm) of the tube writing area

0.5ml = 14

1.5ml = 19

2.0ml = 34

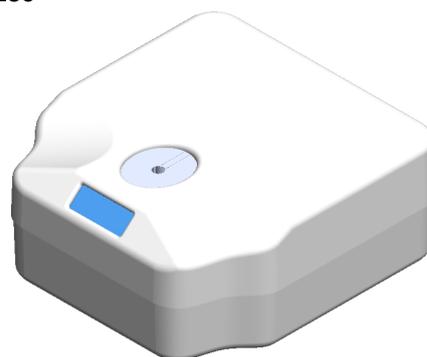

2. Numbering

- choose Yes if you want to use sequential numbering and set start and end numbers
- if end number is not known set it to 0
- number increments automatically from the start number after each tube

3. Text

- write the text you want to print on tubes (limited by tube writing area length (tube type) and text orientation, see 5. Settings)
- press Enter to change line

4. Print

- insert a tube in the printer and press Space to print
- (current sequential number can be modified using arrow keys left & right)


5. Settings

Tube lift	Printer lifts the tube after printing
Text orientation	Horizontal = perpendicular to the tube Vertical = parallel to the tube
Display brightness	LCD brightness, set from 1 to 5
Power save delay	Time in minutes after the printer goes to sleep mode if not used




Using Computer To Write Text And Print Tubes

- start the program by clicking shortcut Scribbler (on desktop)
- choose Menu -> Connect
- write the text in Excel or directly to Scribbler
 - each row is one tube and adjacent cells are separate text lines
- click "Start printing" button to send printing data to Scribbler

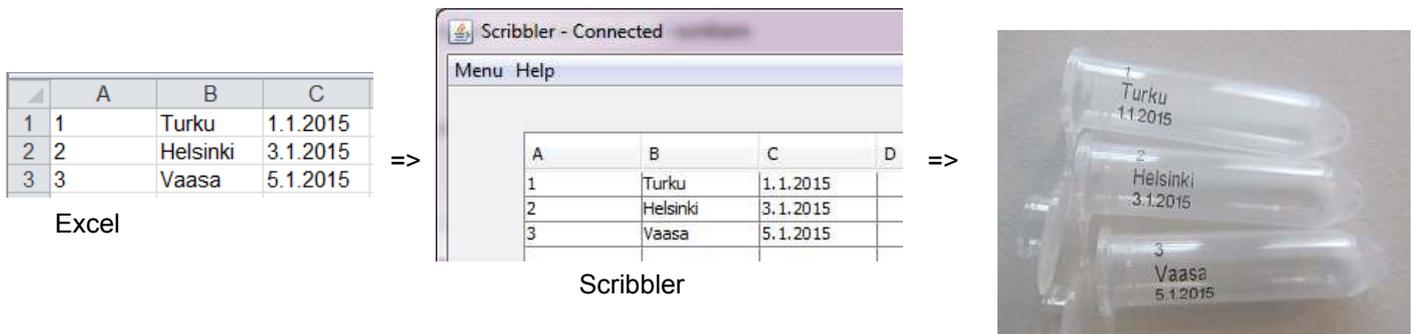

Printing:

- press space to print (keyboard connected to the tube writer)
- green row on PC screen indicates which line will be printed
- use PageUp or PageDown buttons to move the green row (printer keyboard)
- green row can be chosen also by clicking with mouse (left button)

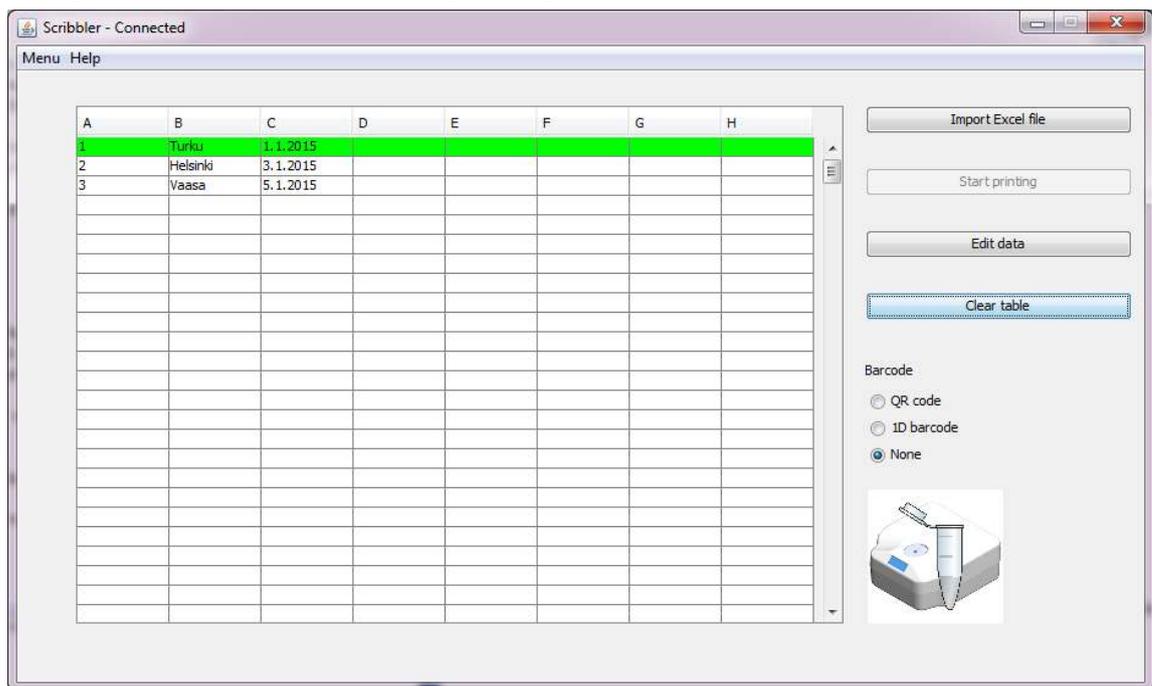

- alternatively the tube type and other settings can be changed by PC in Menu -> Settings